

How to attach / detach the arm for ZOOM rearview mirror


attention



Disassembly prohibited

When removing the arm from the rear view mirror, fix the nut and loosen the arm.


Enlarged view

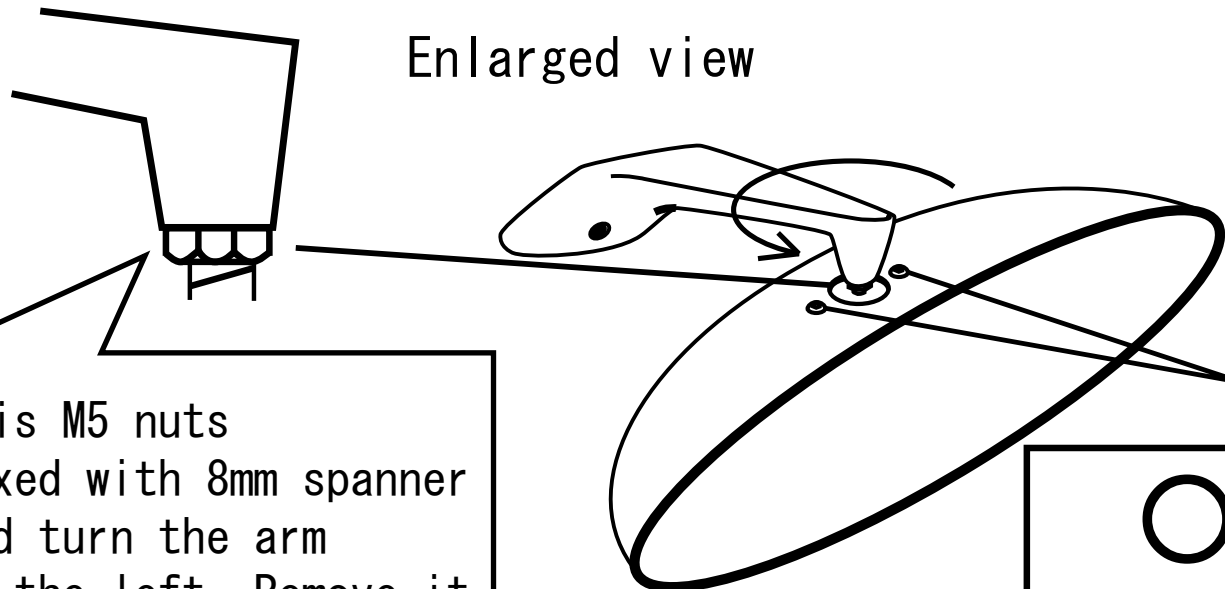

This M5 nuts
Fixed with 8mm spanner
And turn the arm
to the left Remove it.
[Installation is
the opposite]

This screw is the hardness of the ball joint Please do not remove it for adjustment. If you remove it, the nut will come off and you have to break the mirror. It cannot be undone.
When tightening, use a 2.5 mm hex wrench Please use.

*Do not overtighten

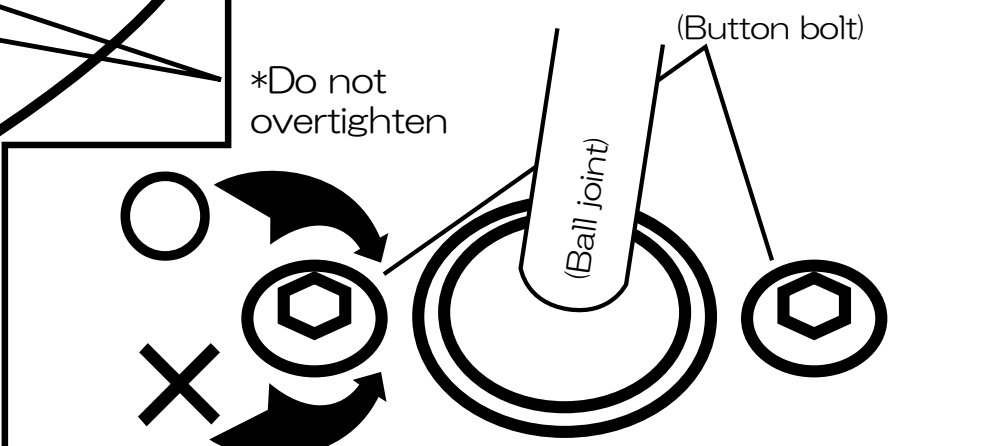

Enlarged view

* Be careful not to loosen the button bolt too much (5 rotations or more is prohibited)

- The ball joint will not come off even if the screws are removed.
- Do not disassemble the mirror angle adjustment part.
- If you have any questions, please contact Zoom Engineering.

